Panasonic®

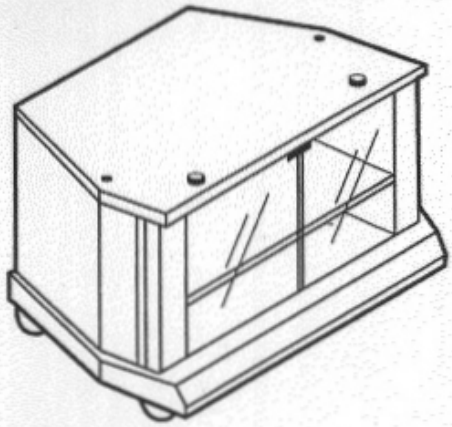

Assembly Instructions
TY-34WDM60J
VIDEO STAND

The tools required:

Plus (+) screwdriver

Important

A study of the assembly instructions will not only save you time, but may prevent possible damage to your new stand.
Assistance may be required for some assembly procedures.

CAUTION: THIS STAND IS DESIGNED FOR USE WITH PANASONIC VIDEO MONITOR.

UL APPROVED MODEL: CT-34WDM60

Your hardware pack contains / Replacement parts

Assembly screw ① 2 Pcs. THEA024U	Rear panel fastening screws ② 5 Pcs. THM915-2	Shelf pin ③ 4 Pcs. TBL65347
Glass panel bushing ④ 2 Pcs. TBL65368	Caster ⑤ 6 Pcs. TBLB3023	

Replacement parts

Glass panel shaft seat TMZ159972-2	Screw XSB4+8FZ	Screws XMM31+16	Magnetic catch TKKF0004	Plastic position pin  TBL65392
"Push" metal pad TBLA3007	Metal pad TKK68460-1	Left partition panel  TBLH0148	Right partition panel  TBLH0147	
Right door's hing TBLA3039	Left door's hing TBLA3040	Glass pane (door) TKGA5041	Glass fixture screw THE747V	

Downloaded from www.Manualslib.com manuals search engine

Placement

STEP 1

When placing video sets and other instruments

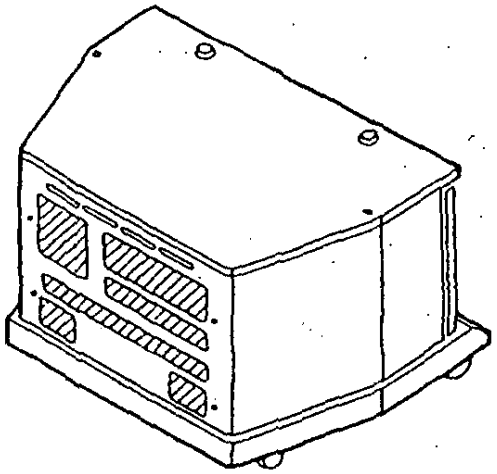

Knock-out (shaded) parts could be removed from the rear panel for wiring and ventilation of the instrument(s) placed inside.

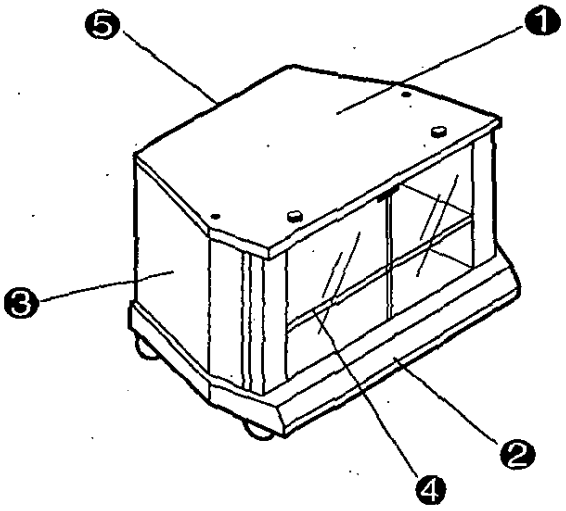

STEP 2

In case of offset or inclination of the doors

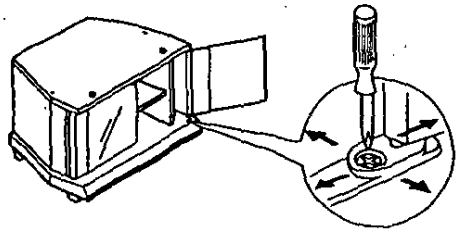

1. Loosen the screw of the glass panel bushing by using a plus (+) screwdriver.
2. Move the bushing left, right, backward or forward to adjust for offset or inclination.
3. Tighten the screw after finishing the adjustment.

   ✻ Do not use electric powered screwdrivers.

STEP 3

Place Video Monitor on stand making sure pins are in line with the bottom holes of Video Monitor.

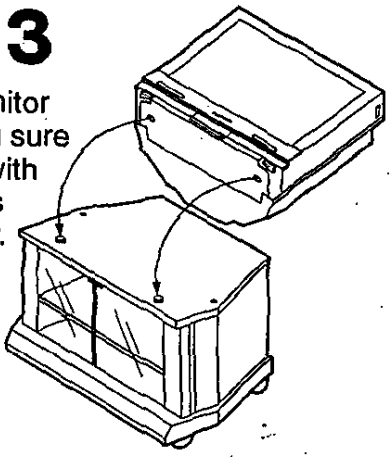

REPLACEMENT PARTS

Ref.	Description	Qty.	Part No.
1	Top panel	1	TBLH0245
2	Bottom panel	1	TBLH0146
3	Side panel	2	TBLH0219
4	Shelf panel	1	TBLH3093
5	Rear panel	1	TBLH3150

To maintain appearance we recommend the following:

Painted Surfaces: Use a damp cloth for cleaning. Do not use any abrasive or chemical treated cleaners.

NOTE: As with all indoor furniture, this unit should not be exposed to direct sunlight, extreme temperatures or moisture, as this can result in serious irreparable damage.

For improvement purposes, design and specifications are subject to change without notice.

When making a part(s) inquiry, please quote part no. & description.

For parts inquiries or for out of warranty purchases:

PANASONIC SERVICES COMPANY

20421 84th Avenue South, Kent, Washington 98032 · Tel: 1-800-833-9626 · Fax: 1-800-237-9080

© 1999 Matsushita Electric Industrial Co., Ltd. · All rights reserved. Unauthorized copying and distribution is a violation of law.

TQZH164

Printed in Japan

Downloaded from www.Manualslib.com manuals search engine

Assembly & Placement Manual

Panasonic

Part No. TY-34WDM60J

Assembly

STEP 1 Assembling the Top Panel, Bottom Panel, Left & Right Sides Panels, and Left & Right Partition Panels

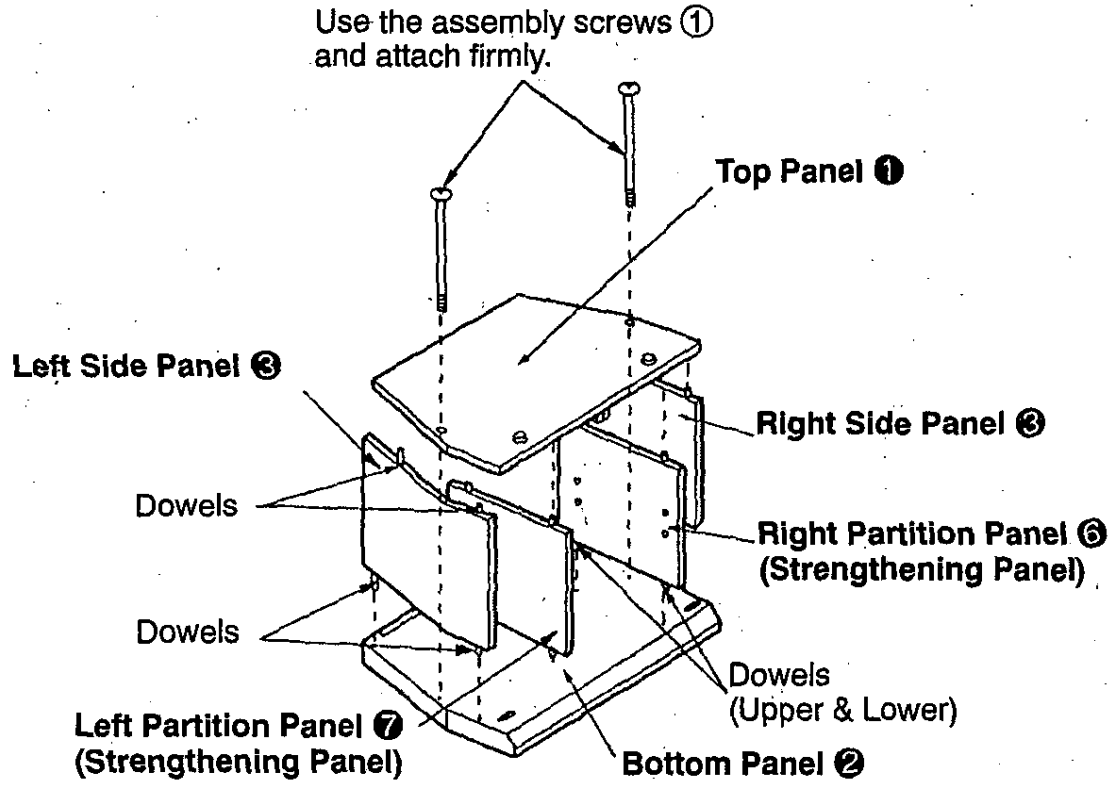

STEP 2 Attaching the Casters

Insert the casters firmly.

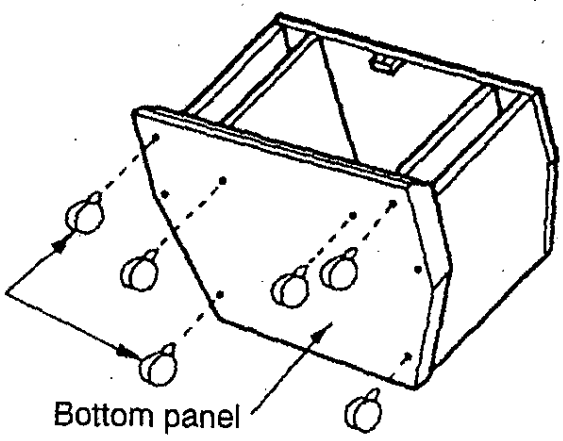

STEP 3 Attaching the Shelf Panel

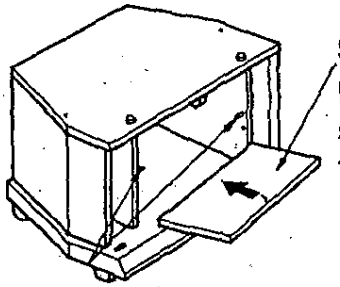

Shelf Panel ❹
Face the black side toward the front.

Insert the shelf supporting pins ③ into the holes on the inward side of the partition panel❻❼. The shelf can be set at 2 levels.

Incline the panel and place the dented parts over the shelf supporting pins.

Shelf *supporting* pin



Downloaded from www.Manualslib.com manuals search engine

STEP 4 Attaching the Rear Panel

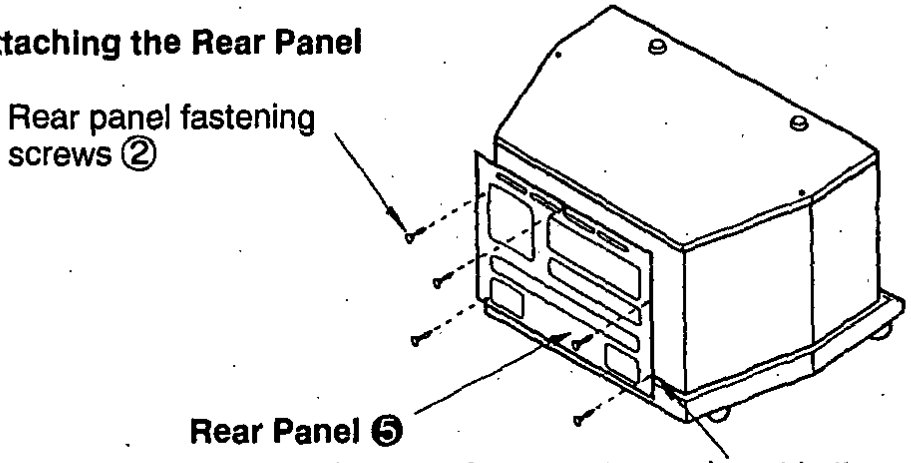

Face the black side toward the inside.
Tighten the rear panel fastening screws ② to strengthen the overall structure.

STEP 5 Attaching the glass doors

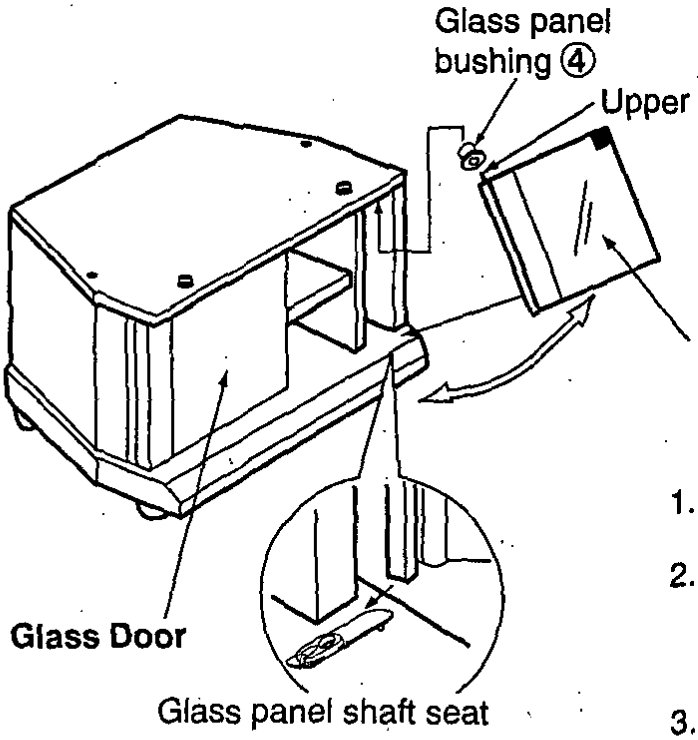

Glass Door
Install the door (in "open" conditions.)

1. Insert the glass panel bushing ④ into the holes of the top panel.
2. In order not to scratch the bottom panel, insert the upper shaft of the glass door (in "open" conditions) into the glass panel bushing ④.
3. While pushing the upper rotation shaft upward, slip the lower rotation shaft into the glass panel bushing. Make sure it is locked in position.

Downloaded from www.Manualslib.com manuals search engine